

PRO


GET IT 3D PRINTED

 **Craftcloud®**

Fast, Affordable 3D Printi...

[Get Instant Quote](#)

X

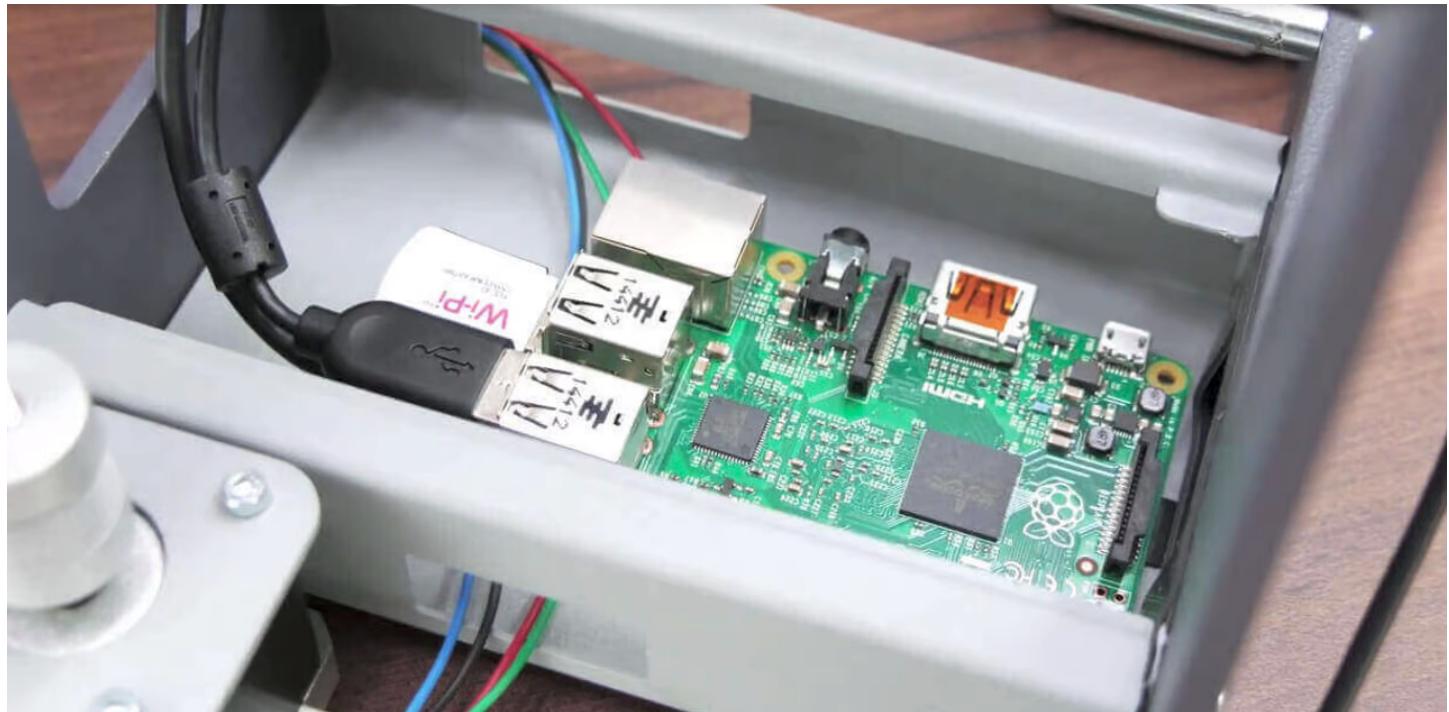

This article is free for you and free from outside influence. To keep things this way, we finance it through advertising and shopping links. If you purchase using a shopping link, we may earn a commission. [Learn more](#)

Eight Arms to Print With

Setup Guide to OctoPrint on the Raspberry Pi 2



by All3DP

Published Jan 13, 2016

ADVERTISEMENT

Did you know you can manage your 3D printer over LAN? It's easy to with OctoPrint and a Raspberry Pi 2. Learn how to set up Octoprint.

Note: This guide [originally appeared on Thomas Sanladerer's YouTube Channel](#) and is subject to copyright. Text and images have been reproduced with the author's permission.

By now, you probably know what [OctoPrint](#) is and why using it is better than sacrificing an entire computer just for running your printer. But OctoPrint is pretty rapidly evolving, thanks to Gina Häuge's and [BQ](#)'s commitment to the software, so I'm going to walk you through the easiest way of getting going with the current version.

What OctoPrint does is to hook up your 3D printer to your local network, so instead of having to move SD cards back and forth or tying a PC to your printer with a USB cable, you can access all of your printer's controls with any computer, phone or tablet on the same network and through WiFi.

OctoPrint also comes with the [CuraEngine](#) preinstalled, which basically means that you won't even need to slice your files on a computer anymore, you can just send over the STL model and the printer will do the rest.

And since you can now expand OctoPrint through the new plugin system, you can add pretty much as much functionality as you want.



OctoPrint Setup: What You'll Need

For this guide, I'll be using the [Raspberry Pi 2](#), since, out of the available single-PCB computers, it's both the easiest to set up, the most common one, and generally the platform I'd currently recommend.

But any other Raspberry Pi – all the way from the original model A up to the most current Zero – works as well, albeit with a small speed penalty. Or with a manual install, you can also use most other mini computers like the Beaglebone, the LeMaker BananaPi or Guitar, or even a full x86 computer.



For any of the compact one-board computers, you will also need a decent **micro USB cable** for power. I can personally vouch for Anker cables, since those are both cheap and available worldwide in a consistent quality, but if you have a spare cable from a non-Apple phone or tablet, you can probably use that one as well. Then, as a power supply, most **USB phone chargers** work well as long as they are rated for more than about one amp of current.



Also, you will need a **microSD card** with at least 4GB capacity, preferably 8GB or more for the operating system. For the older Raspberry Pis you'll need a full-size SD card or use an adapter. Most brand-name cards work well, but I'd still

recommend sticking to known-good models. You can find a full list of “approved” SD cards [here](#). And if you don’t have one, grab a **USB card reader** while you’re at it, you’ll need it to write the image to the SD card.



And lastly, for actually connecting all this to the outside world, you can either use the Ethernet jack and connect your Pi to the network that way or, which is probably more convenient, use a **USB wifi adapter**. Many models work well, including the specifically-made WiPi, which I'll be using, and many Edimax and Asus models. You can find the full list linked [here](#).



An optional accessory that is going to make your life much easier is a **Webcam**. Most common webcams work with no extra configuration at all, like pretty much the entire lineup from Logitech or Microsoft. I've personally got the Logitech C170 and C270 in use, which both get the job done equally well. Trust me, that "HD" upscaling on the C270 doesn't do anything. [Here](#) is a list of compatible models.

OctoPrint Setup: Installing the Image



The screenshot shows the OctoPrint website with a green header bar. The main title 'Download & Setup' is prominently displayed in white. Below the header, there is a section titled 'OctoPi' with a sub-section 'Getting Started with OctoPi'. The 'Getting Started' section contains a list of steps for flashed the OctoPi image onto a Raspberry Pi. It includes instructions for unzipping the image, configuring WiFi, booting the Pi, logging in via SSH, and accessing OctoPrint through a web browser. A download button for 'OctoPi 0.12' is also visible.

Now, the software image we are going to use is Guy Sheffer's [OctoPi](#), which is basically a pre-configured image with everything that's needed to get OctoPrint going.

The Pi is going to read everything from an SD card, so to get the image file onto one, grab your card reader. For Windows users, there is the [Win32DiskImager](#) tool, whereas Linux and MacOS users can find instructions on how to use the [DD Utility](#) to do the exact same thing on the [Raspberry Pi website](#).

Once you've written the image to the card, you are going to see a "boot" partition pop up in your file manager. And there's really only one file of interest on there, and that's the *octopi-network.txt* one, where you can configure your wifi. If you're only using wired networking, you can completely skip the next step.

OctoPrint Setup: Configuring Wifi

```
1  # You can use this file to manually set up your network configuration.
2  #
3  # This file is included into /etc/network/interfaces, so anything that
4  # works by editing that file is also possible here.
5  #
6  ### WIFI CONFIGURATION #####
7  # The three segments below should cover you in most cases if you run
8  # a wifi network that uses either WPA/WPA2 or WEP encryption.
9  #
10 # Just uncomment the lines prefixed with a single # of the configuration
11 # that matches your wifi setup and fill in SSID and passphrase.
12 #
13 ## WPA/WPA2 secured
14 #iface wlan0 inet manual
15 #    wpa-ssid "put SSID here"
16 #    wpa-psk "put password here"
17 #
18 ## WEP secured
19 #iface wlan0 inet manual
20 #    wireless-ssid "put SSID here"
21 #    wireless-key "put password here"
22 #
23 ## Open/unsecured
24 #iface wlan0 inet manual
25 #    wireless-ssid "put SSID here"
26 #    wireless-mode managed
27 #
28 ### WIRED CONFIGURATION #####
29 # The following segment allows you to configure your wired connection
30 # with a static IP.
31 #
32 # Just uncomment the lines prefixed with a single #. Then connect
33 # a cable to the Pi and another system, e.g. a Laptop, and set that
34 # other system's network configuration to:
35 #
```

Open up the txt file with a decent text editor like [Notepad++](#) (the Linux and MacOS default editors also work well, while Windows' Notepad does not), and head down to the Wifi configuration section. Modern networks use WPA and WPA2. If your network still uses WEP or no encryption at all, you should really upgrade.


So fill out the SSID, so your wifi's name, as well as the pre-shared key – basically its password. Keep the quotation marks around your SSID and password. Also don't forget to remove the octothorp at the beginning of the relevant name and password lines as well as the single line above them to enable them all. Hit save and you're ready to safely remove the SD card from your card reader and insert it into the Raspberry Pi.

At this point, also connect your Wifi Dongle or Ethernet cable, your 3D printer and, if you have one, your webcam before plugging in the microUSB power cord. The Raspberry Pi should now boot up and connect to the network, as indicated by the blinking status LED on the Wifi adapter or the Ethernet section on the Pi. If it does not, try writing the image to the SD card again and double-check your Wifi configuration in the *octopi-network.txt* file.

If it has successfully connected, you will now be able to access the Raspberry Pi at *octopi.local* or, through the Raspberry Pi's IP address, which you can look

up in your router's interface. Each router is a bit different, so I can't explain it for every single one, but it's typically either on the front page or in the "network status" menu. And one last way that works on surprisingly many computers is the network auto-detection configuration upnp thing that you can find in the network environment browser of your operating system.

OctoPrint Setup: Important Security Step 1

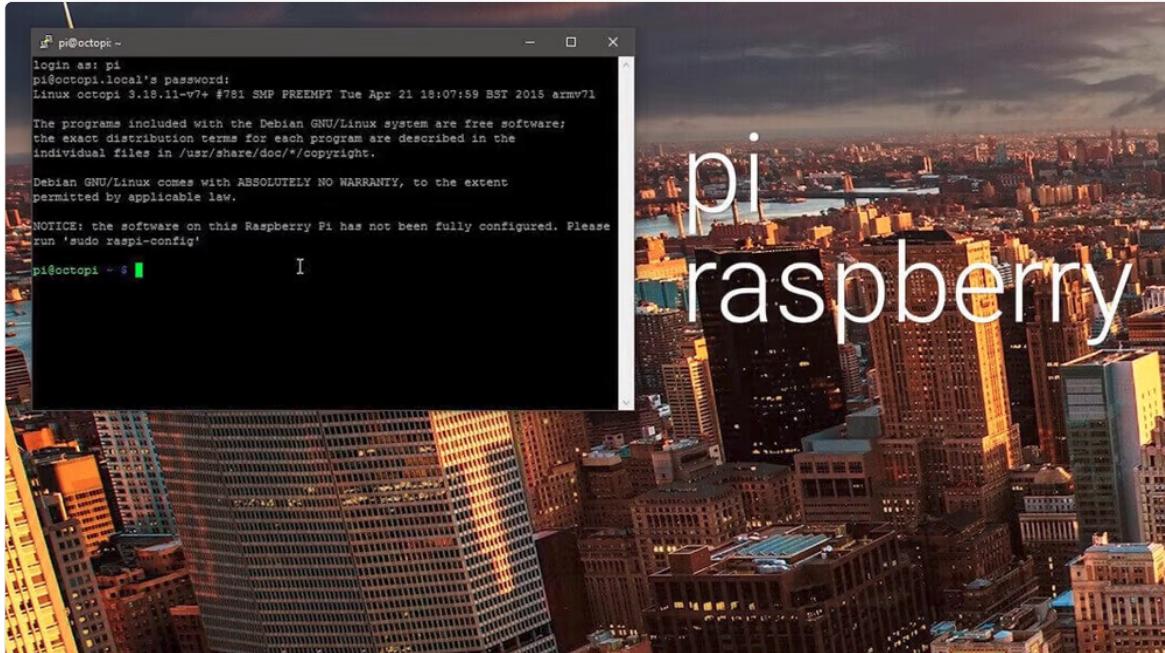


Before you go dive into the web interface, there are two more things you will need to configure on the Pi. To do that, connect to it via SSH, for Windows, you can use the [Putty tool](#), Mac OS and Linux come with SSH clients included.

Enter *octopi.local* or the Pi's IP address directly and hit connect. Accept the Pi's encryption fingerprint, and it will then ask you for a username and password, which, by default are the exact same "pi" username and "raspberry" password on every single Raspberry Pi, which is why that's the first thing we should change.

Once you've logged in, enter `passwd` and hit return, this will ask you for your current password and a new one of your choice, try to pick a reasonably safe one there. If you're unsure about what is generally a good password and what is not, [test one out on Intel's site](#), where they'll grade how secure your password is. Pretty scary stuff, and it will become relevant again in a minute.

Once you're through the passwd tool, run "sudo raspi-config" and hit return on the first option, expand file system, to allow OctoPrint to use the entire space on the SD card for your print files, updates and log files. Then hit tab twice to select "Finish", and confirm the reboot.

OctoPrint Setup: Important Security Step 2

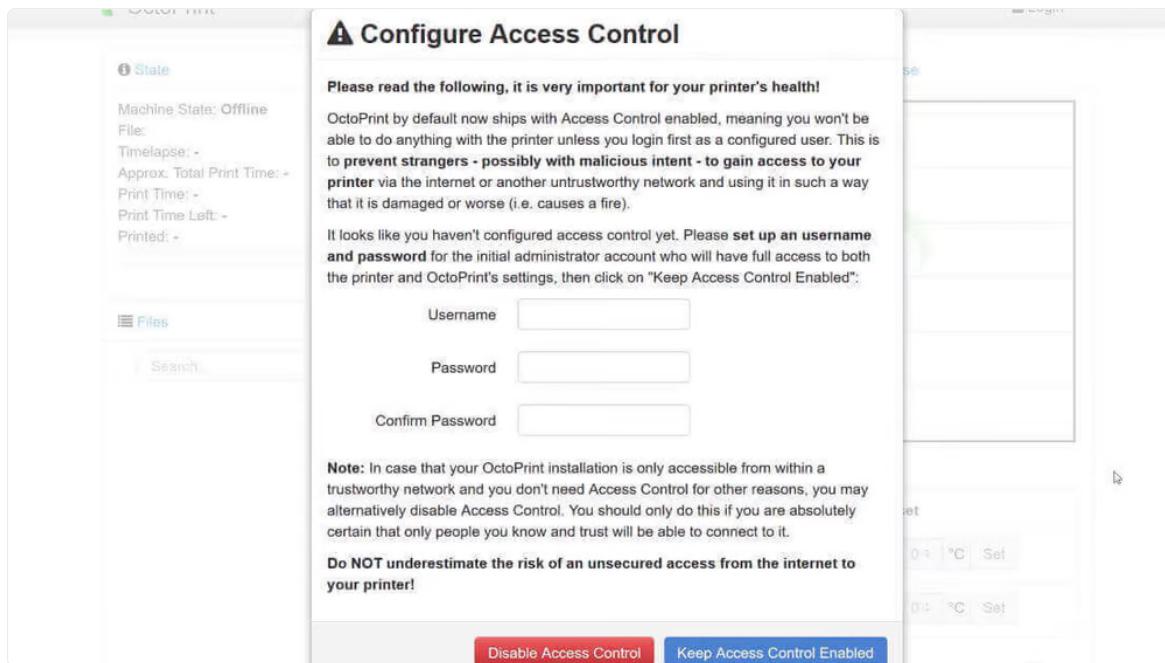

Now once that reboot is done, you can go ahead and open up the OctoPrint web interface with your favorite browser (as long as it's not Internet Explorer 6.0), and again, at `octopi.local` or the IP address directly.

On the first time you open it up, OctoPrint will show you its first run wizard. Which, realistically, isn't much more than the point where you will get to decide how secure you want your OctoPrint setup to end up.

So by default, OctoPrint will want you to set a username and a password. Which makes sense, because everyone who can access your OctoPrint setup, also has the power to burn your printer down. Or at least very seriously damage it.


So if a) your printer is on a network where you don't absolutely trust everyone one there or, b) if you're even planning to make your printer accessible from the internet... I can't stress this enough, **enable access controls** and **pick a decent username and a safe password**.

You'd be surprised how many unsecured OctoPrint instances Google finds with the right search terms.

Now there is a use case where disabling the security features makes sense, and that's when you're connecting the Pi only to your home network with no insane relatives around and have a decent firewall/router thing handling your internet connection.

In that case, feel free to disable the extra security, but keep in mind this is in fact the only layer of security between someone with access to your network and full control over your 3D printer.

OctoPrint Setup: Using the Web Interface

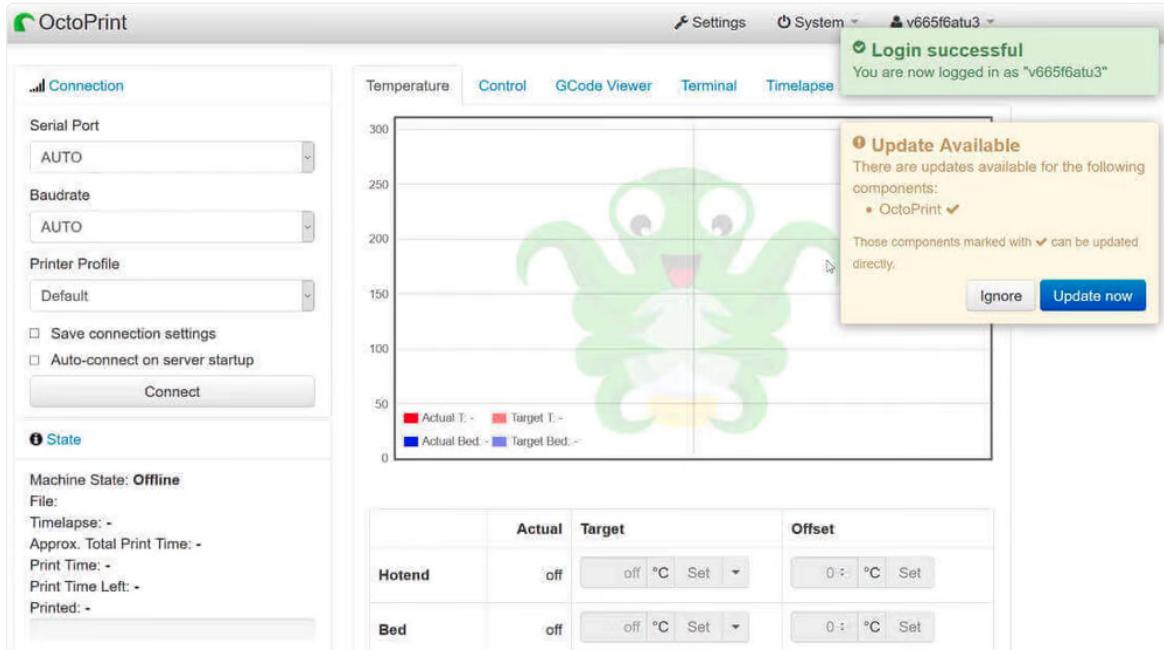

Reload the page, and you should have the full interface available.

At this point, OctoPrint is likely to offer you an update, which you should do right now to get all the updated features right from the start. If the update does not work or anything else about the interface still feels off at this point, a reboot through OctoPrint's menu would be a good idea.

As a general note, try not to power off the Raspberry Pi by simply yanking the power cord out or turning off the power supply. While it's likely that it's going to

ADVERTISEMENT

boot up just fine the next time, there is a small chance of some part of the Linux system breaking when you do it and you'd have to do the entire setup again.

Instead, always use the menu to shut it down first, then wait for the status LEDs to stop flashing and you shouldn't run into any issues down the road.

And that's it for the setup process, OctoPrint is now fully ready to use. You can go ahead and connect to your printer, upload a gcode file, and start printing.

Recommended for you

Topics

[OCTOPRINT](#) [RASPBERRY PI](#)

All3DP Comment Policy

Keep discussion on-topic and respectful. Comments that breach our community guidelines will be removed.

Please read our [Comment Policy](#) before commenting.



3 Comments

All3DP

[Disqus' Privacy Policy](#)

[Login](#) ▾

[Favorite](#)

[Sort by Best](#) ▾



Join the discussion...

LOG IN WITH



OR SIGN UP WITH DISQUS

Name



[Munkeh Madness](#) • a year ago

I find it hard to believe Notepad would cause a problem.

Octoprint say not to open it in Wordpad (which is pretty obvious - Wordpad loves to try formatting stuff)

[SHOW ALL COMMENTS](#)

ADVERTISEMENT

All3DP

The World's #1 3D Printing Magazine for Beginners and Professionals.

Information

[ABOUT US](#)

[CONTENT POLICY](#)

[DATA PROTECTION POLICY](#)

[PRIVACY POLICY](#)

[TERMS OF USE](#)

[IMPRINT](#)

Links

[CRAFTCLOUD](#)

[EDITORIAL ADVISORY BOARD](#)

[ADVERTISE WITH US](#)

[WRITE FOR US](#)

[JOB OPPORTUNITIES](#)

[PRIVACY SETTINGS](#)

Follow us